

10/522670

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 1 of 5

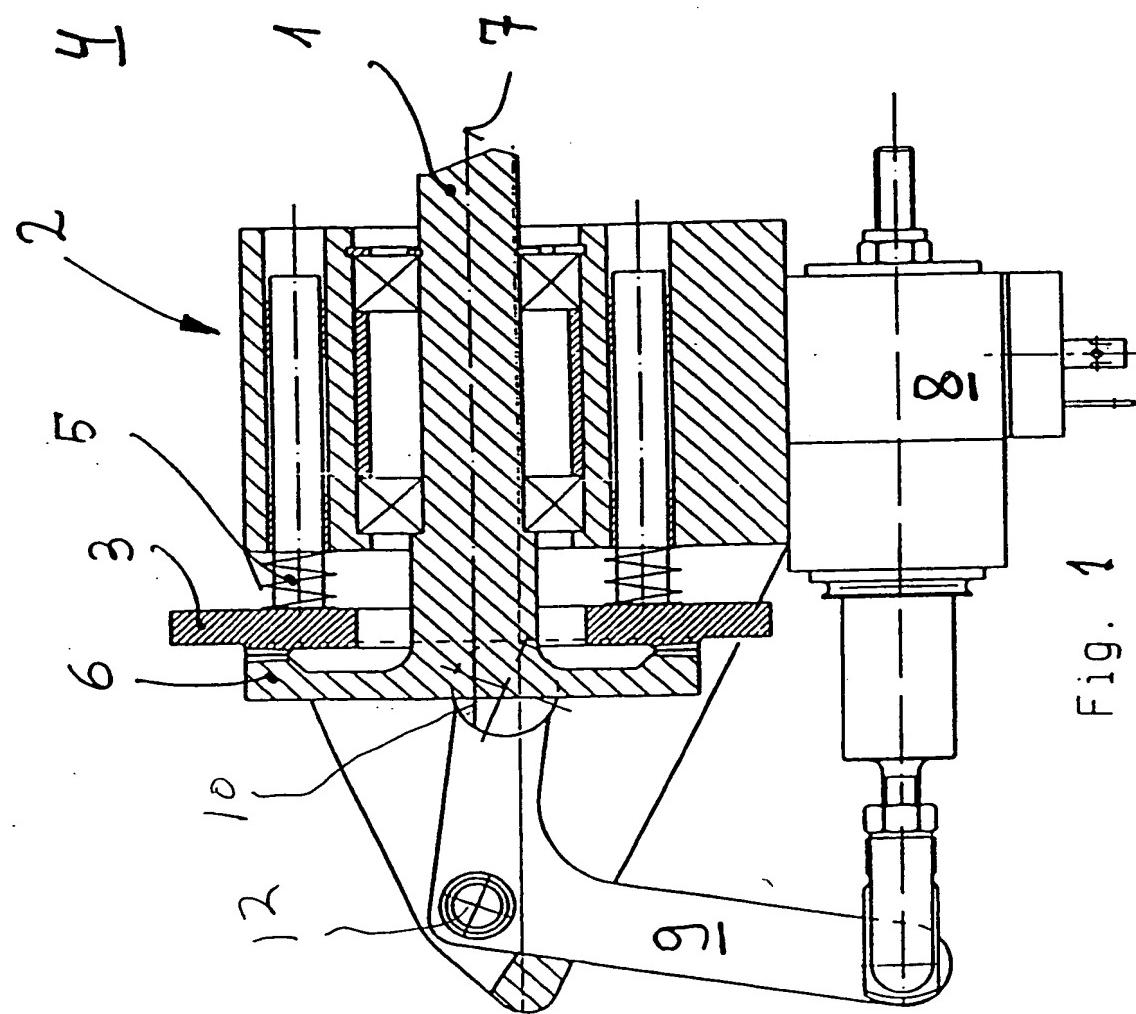


Fig. 1

10/522670

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 2 of 5

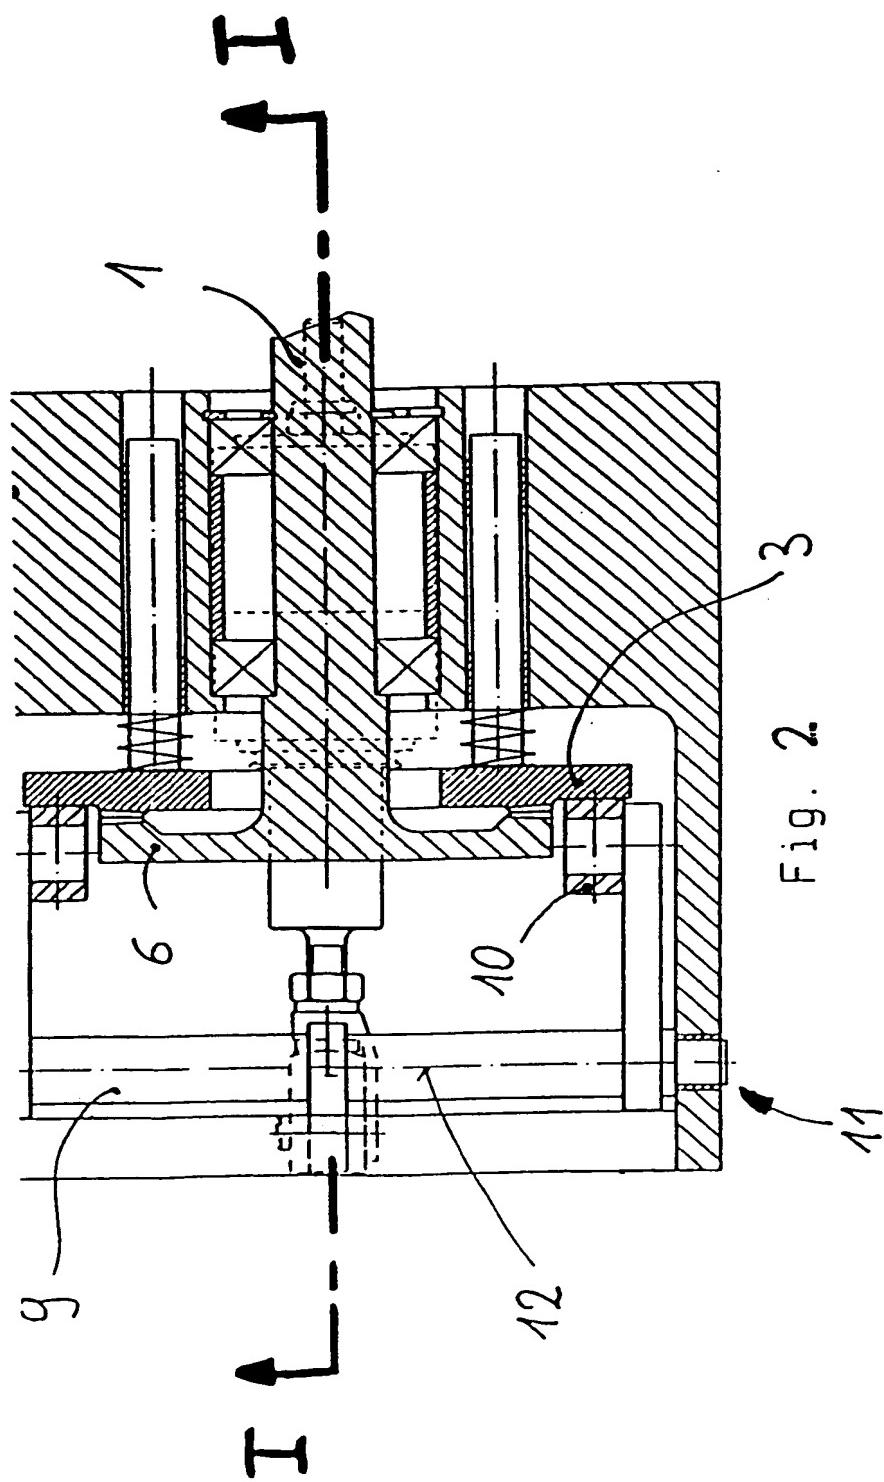


Fig. 2.

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 3 of 5

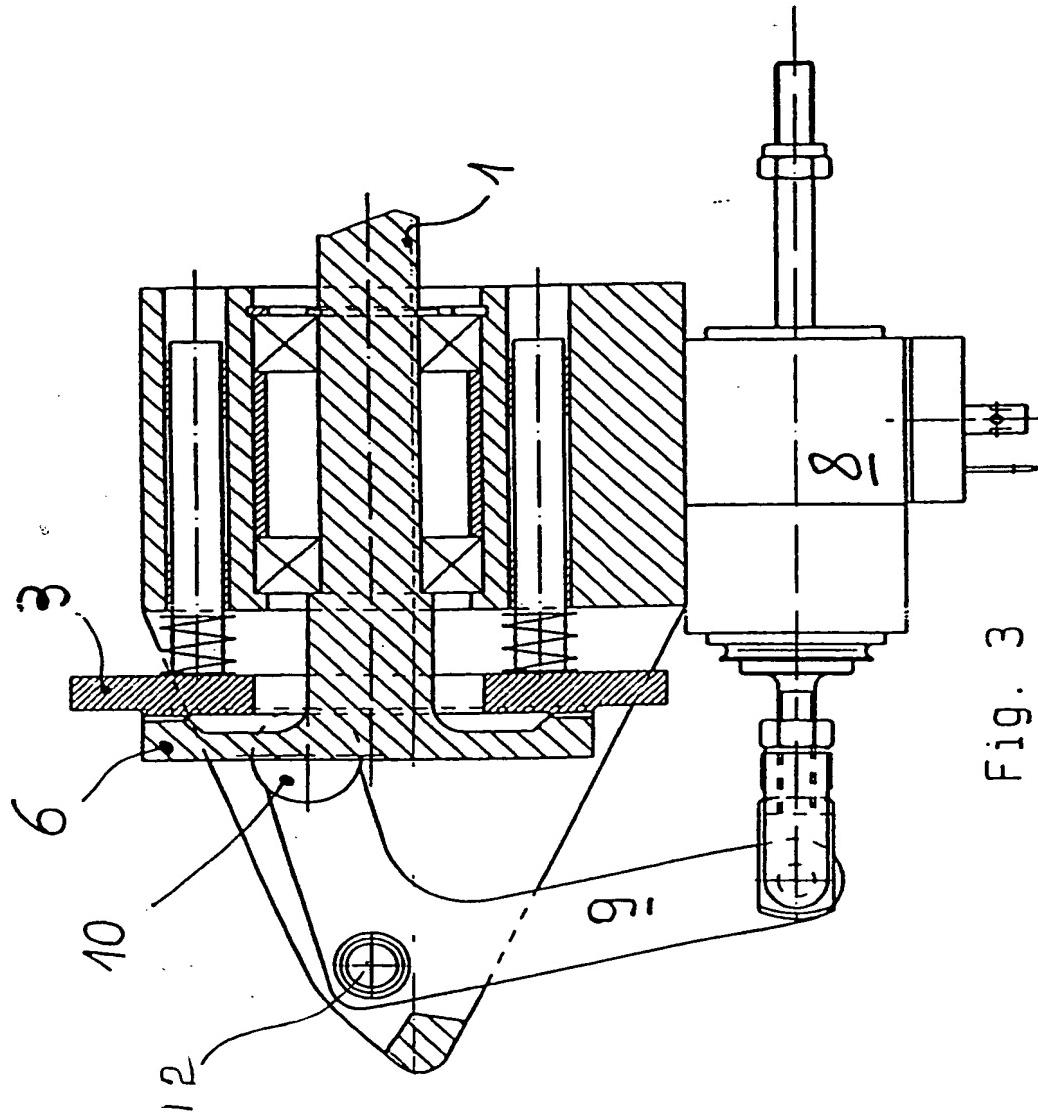


Fig. 3

10/522670

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 4 of 5

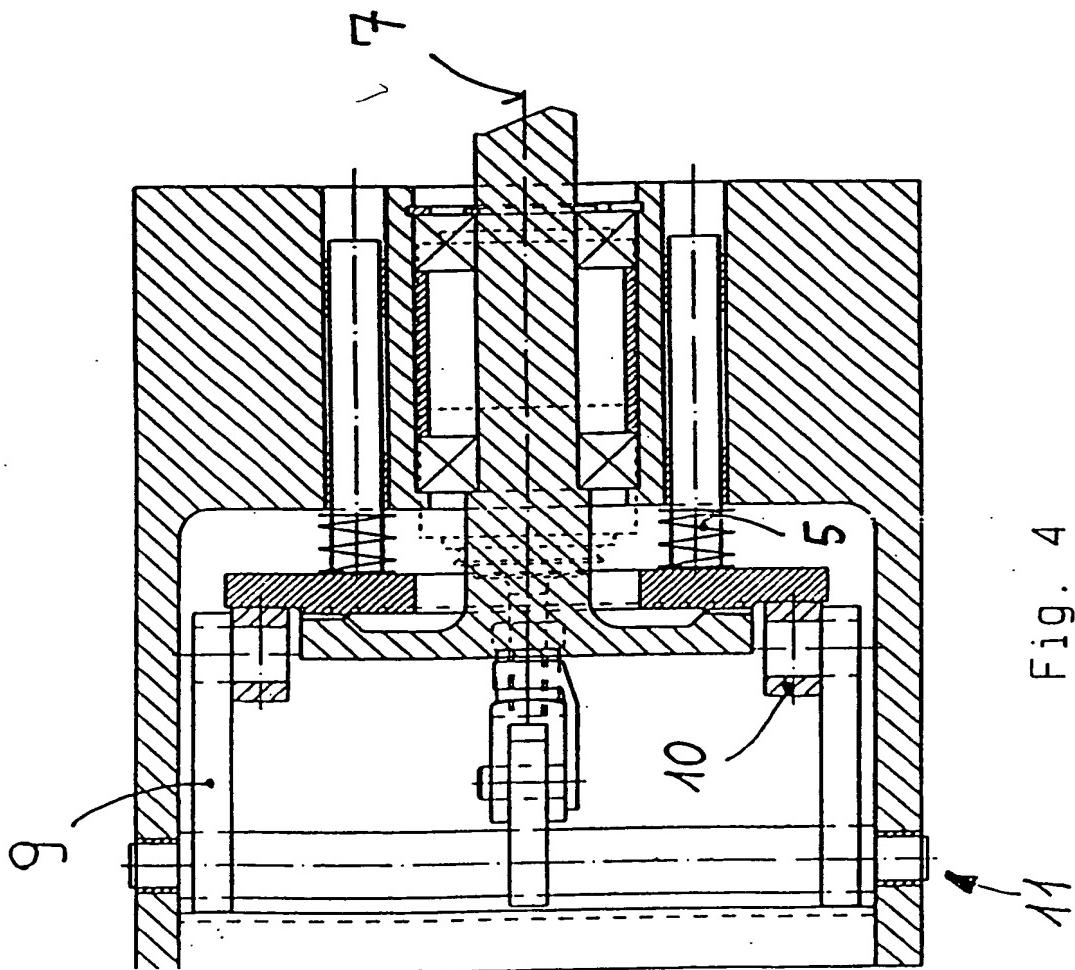


Fig. 4

10/522670

Wolfgang Kossl
DOOR ACTUATOR
566/43619
Sheet 5 of 5

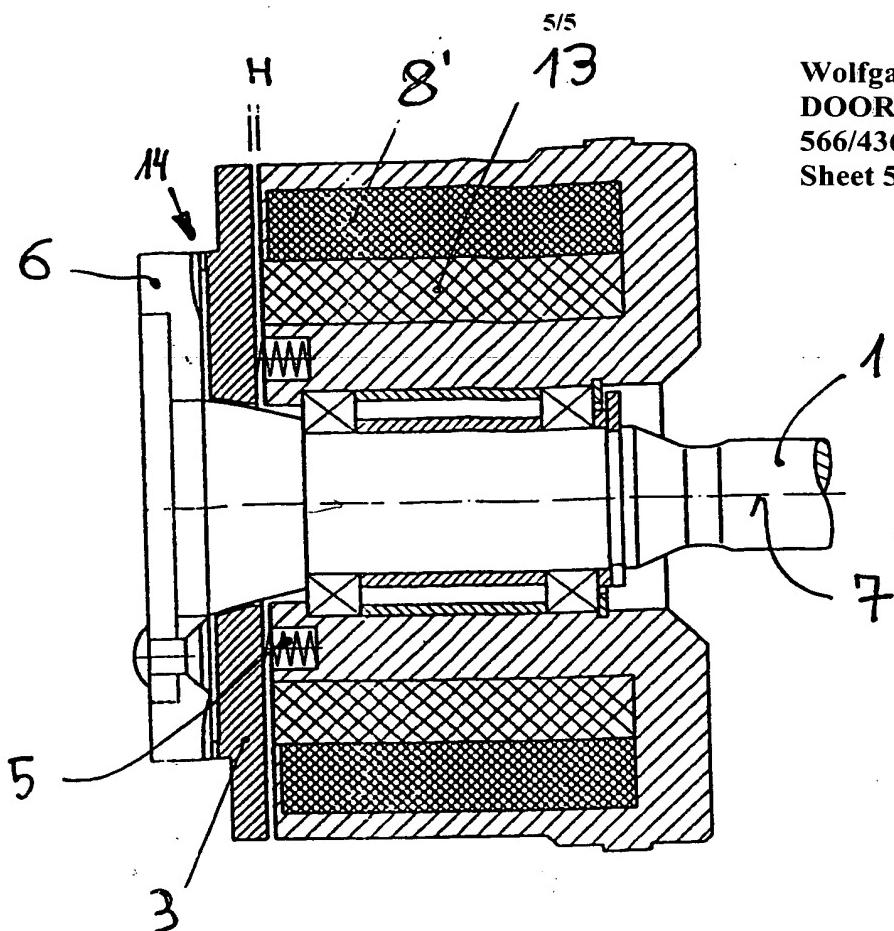


Fig. 5

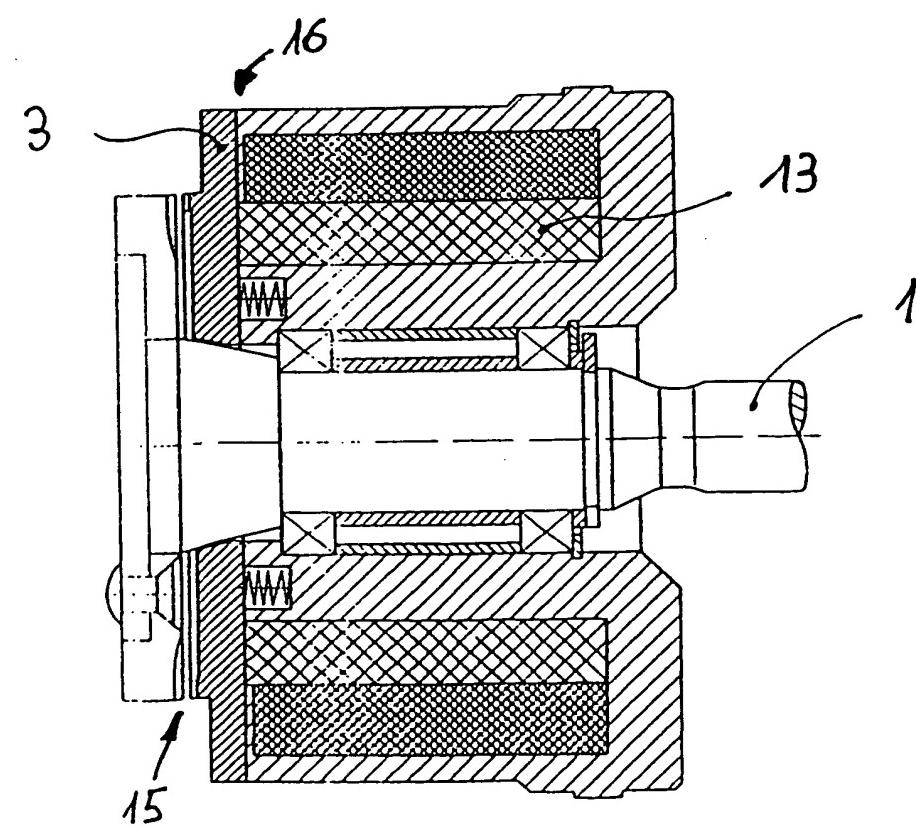


Fig. 6